




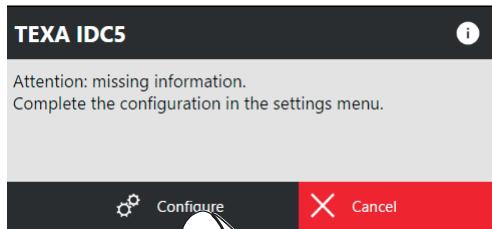

1a

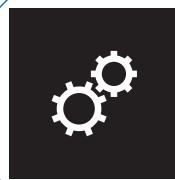


1b

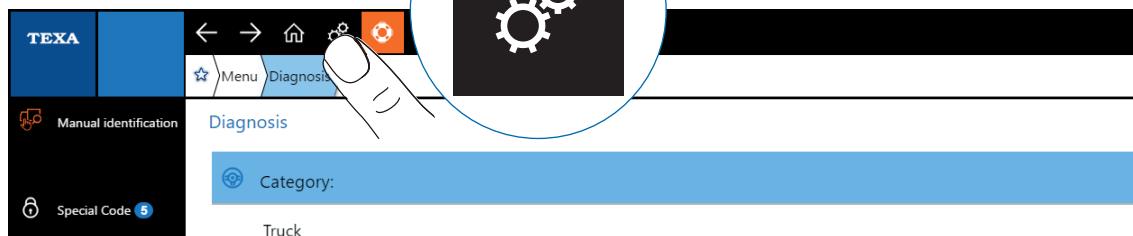

Select the application and press ENTER



2

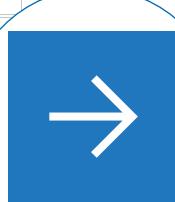



3

Configuration Wizard

Search and configuration of a new tool

Configured devices (0)

Detected devices (21)

- Multihub DN1AT000157
- Multihub DN1AT000138
- Navigator TXT Series DNFTT000060
- Navigator TXT Series DNATAT014063
- Navigator TXT Series DNATAT00027
- Navigator TXT Series DNFTT000066
- Navigator TXT Series DNBTCT000006

Premere sul TXT da configurare.
Press on the TXT that must be configured.
Appuyer sur le TXT à configurer.
Auf den zu konfigurierenden TXT drücken.
Presionar en el TXT que se debe configurar.

4

Configuration Wizard

Multihub DN1AT000157 MAC address E8:E8:B7:0C:7B:5C

Station mode configuration (Diagnostic software - Wi-Fi network - VC)

You can configure up to 5 Wi-Fi networks in the VC to which it will connect automatically. For example, it can be connected to the workshop's Wi-Fi network or, during an intervention, to a mobile device. Warning: only 2.4GHz Wi-Fi networks will be detected.

Networks detected by the VC

Networks configured in the VC
JollyTruck! (recommended network)
TP-LINK_3D6008
TEXANET
Guest
Colleudi
TP-LINK_AP_6CF4
MOBILE

Networks configured in the VC

Networks configured in the VC
JollyTruck!

You can add another network to this list
Select one of the 'Networks detected by the VC'
or add a network manually

5

Configuration Wizard

Multihub DN1AT000157 MAC address E8:E8:B7:0C:7B:5C

Configuration completed

The tool just configured will be available through these interfaces:

USB	Bluetooth	Station	Hotspot
-----	-----------	---------	---------

Se la modalità di comunicazione non è attiva premere:

If the communication mode is not active, press:

Si la modalité de communication n'est pas activée, appuyer sur :

Wenn der Kommunikationsmodus nicht aktiviert ist, drücken Sie auf:

Si la modalidad de comunicación no está activa presionar:

